


BOVA 5529CS Toilet Cubicle

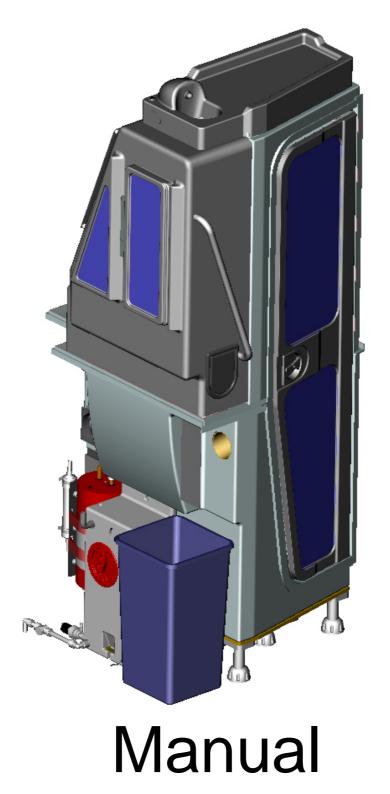

Catalogue No. 746198

CUBICLE OPERATING INSTRUCTIONS	3
CLEANING & HYGENE	5
CUBICLE MAINTENANCE	6-8
WARRANTY CLAIMS	9
SPARE PARTS CATALOGUE	
 Door Sink Vanity Fridge Drinks Boiler Electrical Panel Toilet Bowl Worktop Soil Tank Handwash Tank Cubicle Base Cubicle Top External Legends 	10 12 14 16 18 20 22 24 26 28 30 32 34 36
WIRING DIAGRAMS	37

PARTS REPLACEMENT INSTRUCTIONS	39

To Switch The Cubicle On:

Engage the WC Master switch on the dashboard. The cubicle interior lamp will turn on for 30 seconds and then switch off. The cubicle is now ready to use. *(It is recommended that the vehicle engine is running)*

Cubicle Interior Light:

On entry, the interior lamp will come on automatically and illuminate the "Occupied" lamp. The interior lamp is controlled by a movement sensor which will switch off the light automatically shortly after the cubicle is vacated.

To Flush The Toilet:

Push the flush button vonce to flush the toilet with a set quantity of water. Should a further flush be required, wait for the flush cycle to complete then press the button again. NOTE:

(When the holding tank is full, the dashboard LED *w* will illuminate and the "Occupied" lamp will signal. The toilet is now out of use until the holding tank is emptied.

(When the clean water tank is empty the dashboard LED ^{wc} will illuminate and the "Occupied" lamp will signal. The toilet is now out of use until the water tank is re-filled.)

To Wash Your Hands:

Depress the handwash button not once to dispense a set amount of water.

(When the handwash tank is empty the dashboard LED will illuminate to alert the driver..)

Cubicle Extractor Fan:

The ventilator fan runs continuously when the master switch is ON but has the option to only work when the light is activated.

Water Tank Filling & Emptying

Tanks are filled via the hose connectors located in the side locker. The holding tank is emptied pneumatically by pushing a button in the locker. The park brake will need to be engaged for this to work.

To Switch The Kitchen On:

Engage the Kitchen Master switch on the dashboard. The kitchen lamp will turn on, the boiler LED panel will light and fridge fan will start. *(It is recommended that the vehicle engine is running)*

Kitchen Hot Drinks System:

The water heater will take 20-30 minutes to reach temperature and the hot faucet should start to drip. This is due to the expansion inside the boiler as it gets hot.

To dispense the hot water, place a cup inside the sink, push and hold the RED button until finished.

Coolbox - Fridge:

The coolbox will take approximately 2 hours to get to 5 Deg C from warm but can go as low as 3 Deg C during operation. This time depends on the contents of the fridge and the times are based on it being empty. For best performance it is advisable to introduce pre-chilled items into the fridge.

The unit is equiped with an 'ECO' mode which allows the unit to run on low power when the vehicle is switched off and this can maintain a steady 5 Deg C.

The battery guard will detect low voltage in 'ECO' mode and cut power to the unit saving the batteries.

Cubicle Cleaning

The cubicle is manufactured from Glass Reinforced Plastic (GRP) with high gloss interior and lightly textured exterior surfaces. This surface finish is delicate and must only be washed down using a mild detergent. The use of a caustic or abrasive material is not recommended, as this will affect the appearance.

Toilet Bowl Cleaning

To protect the finish of the GRP toilet bowl do not use abrasives of any kind. To clean the bowl, use a mild anti-bacterial detergent and suitable brush.

Litter Bin

The cubicle features 45 litre plastic bin located in the locker. The bin is filled via two openings, inside the toilet and outside in the aisle. The use of a bin liner is recommended.

Soap Dispenser

To fill the dispenser, lift the lid of the dispenser and fill with liquid soap.

Toilet Roll

It is recommended that a high biodegradable paper is used at all times. **Cat No. = 800103 Pack of 36.**

Domestric grade toilet paper is not recommended as this can block the system.

The toilet roll is located inside the lower vanity door. Unlock and open the door, slide the roll onto the spindle.

Daily Routine

- Prior to the vehicle entering service the holding tank should be charged with an additive to sanitise the effluent.
- The recommended product is **Shades Super Sani ECO**, formulated from natural essential oils, this formaldehyde-free formula is contained within a water soluble membrane. A single 16 gram sachet contains the recommended dosage for 110 litre capacity holding tank and will function for a maximum of three days.

To apply: 1

- Ensure the holding tank is empty.
 Check the tank evacuation value is closed
 - 3. Check the WC clean water tank is full.
- 4. Switch on power to the cubicle (see page 3)
- 5. Press the flush button to open the toilet valve and drop the complete sachet into the bowl.

Cat No. 800025 (Box 100) or Cat No. 800026 (Carton 1000)

Caution Do not open the sachet .

- It is recommended that the WC supply tank is drained and the holding tank is emptied at the end of every day.
- The hand wash tank should be emptied and re-filled dailey. To help maintain a clean tank and freshwater the use of a sanitiser is recommended. Shades can supply a suitable product that disinfects the water, that is safe to drink and non-irritable to the skin and eyes. **Cat No. 800060**

Weekly Routine

- Check extractor fan function.
- Inspect the security of the faucet, door hinges and toilet seat. Check the operation of the cubicle door and lock function.
- Open vanity door, check electrical and plumbing connections for security and leaks.
- Check water flow to the hand basin is smooth and constant.

Quartely Routine

• Flush out holding tank with clean water. (the holding tank must be empty and the vehicle positioned so that the holding tank evacuation valve is over a sewage drainage point)

To flush out:

1. Switch on the cubicle.

2. Connect a hosepipe to a mains water supply.

3. Push a hose pipe through the flap in the bottom of the bowl and into the tank.

4. Turn on the water to the hose pipe and fill the holding tank, being careful not to overfill.

5. Switch off the water to the hose and open the evacuation valve to empty the tank.

6. Press the flush button to open the valve and remove the hosepipe.

- Lubricate holding tank evacuation valve. (to be carried out immediately after flushing through the holding tank).
 Undo the four fixing bolts holding the soil valve assembly together and remove the main body section. Lubricate the slide paddle using lithium grease or similar so the open/close operation is smooth. Replace the valve body and bolt together. Do not over tighten as this will restrict the operation of the valve.
- Disinfect the hand wash tanks and flush through with clean water.

If the vehicle is to be parked in zero or sub-zero temperatures, it is imperative that all water containers are completely drain beforehand.

<u>Note</u>

No warranty claims will be accepted on any winter damaged parts.

Jump Starting

When jump starting the vehicle, please ensure that the dashboard master Switche, **WC**, is **off!**


Fault Reporting Procedure


- 1. In the unlikely event of a fault occurring an emergency parts kit has been supplied along with the enclosed comprehensive fault analysis flow chart
- 2. Using these charts, determine the cause of the fault and replace the faulty item from the kit if possible.
- 3. To order a replacement kit or non-kit part contact the dealer as specified on the contents page (Page 2) of this manual, quoting the cubicle serial number.
- 4. In order for replacement goods to dispatched a simple warranty procedure must be followed.


Notes:


• Tampering, unauthorised involvement or preventable damage will result in a charge being levied


Shades Technics offer a comprehensive warranty cover for all products, valid for 24 months from the vehicle's date in service.

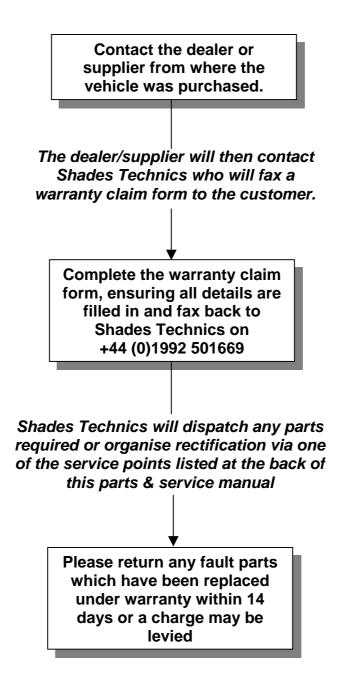


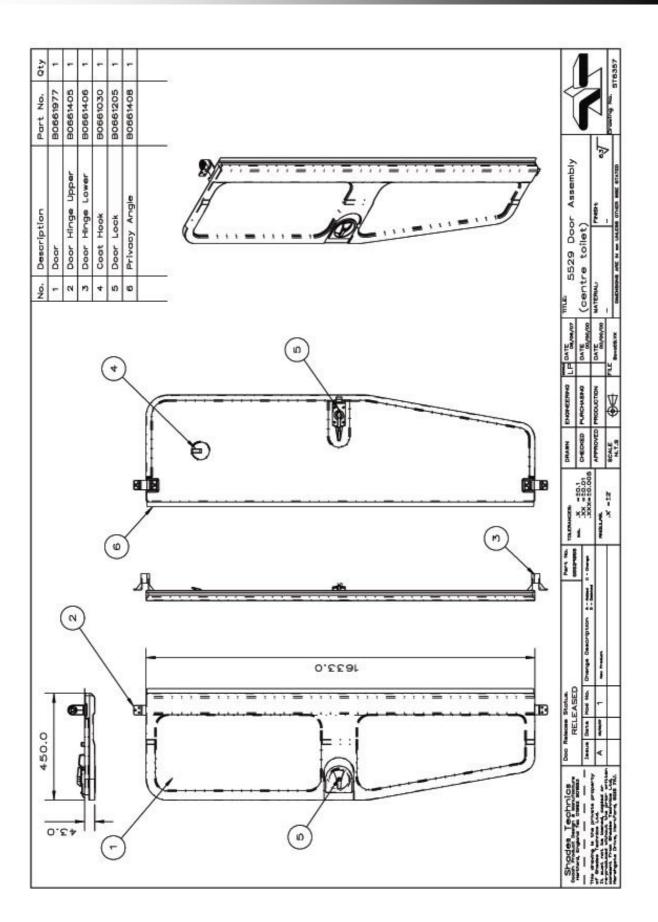


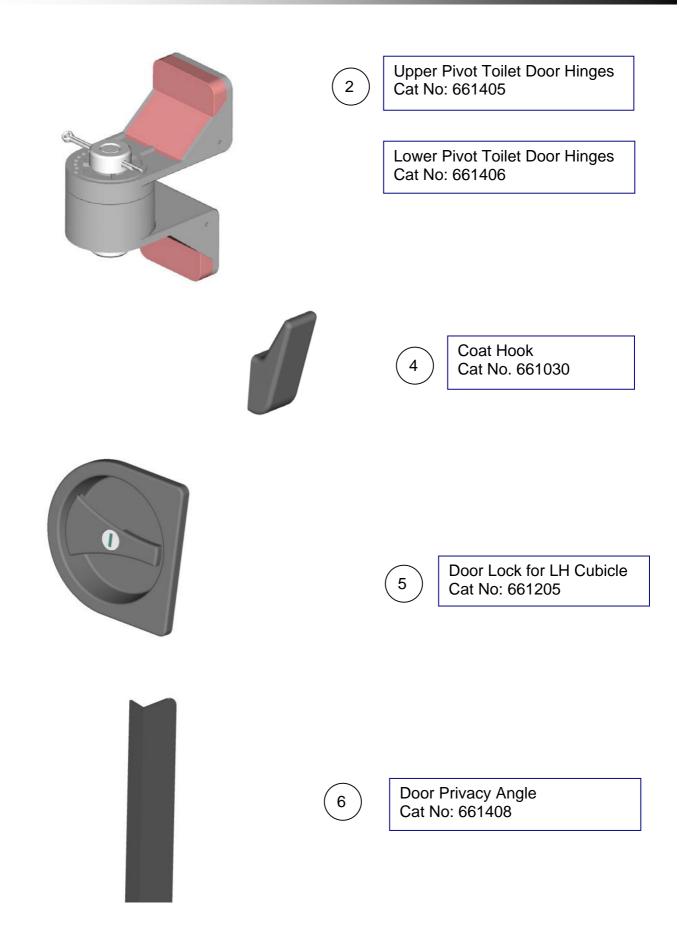


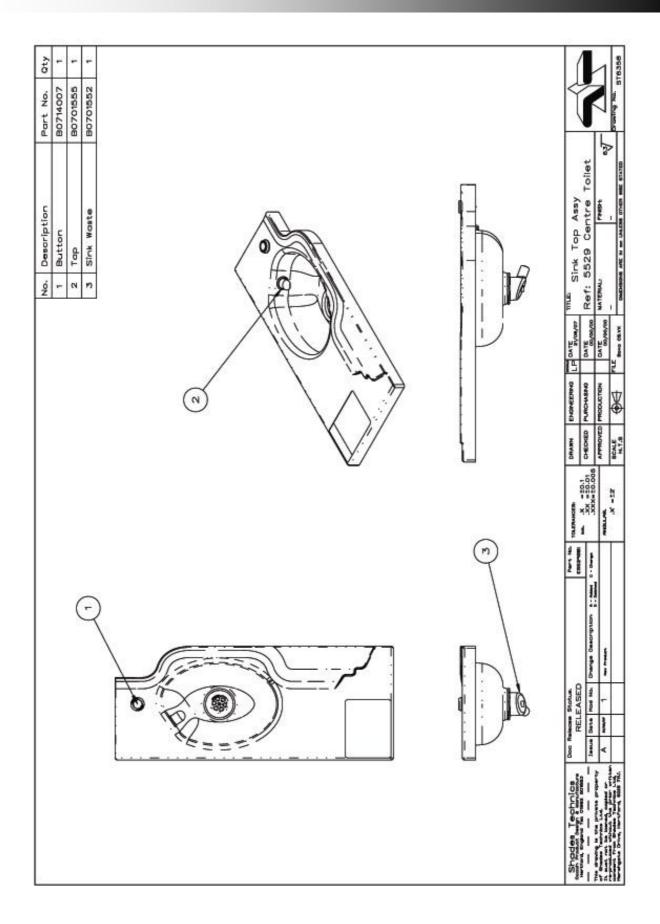

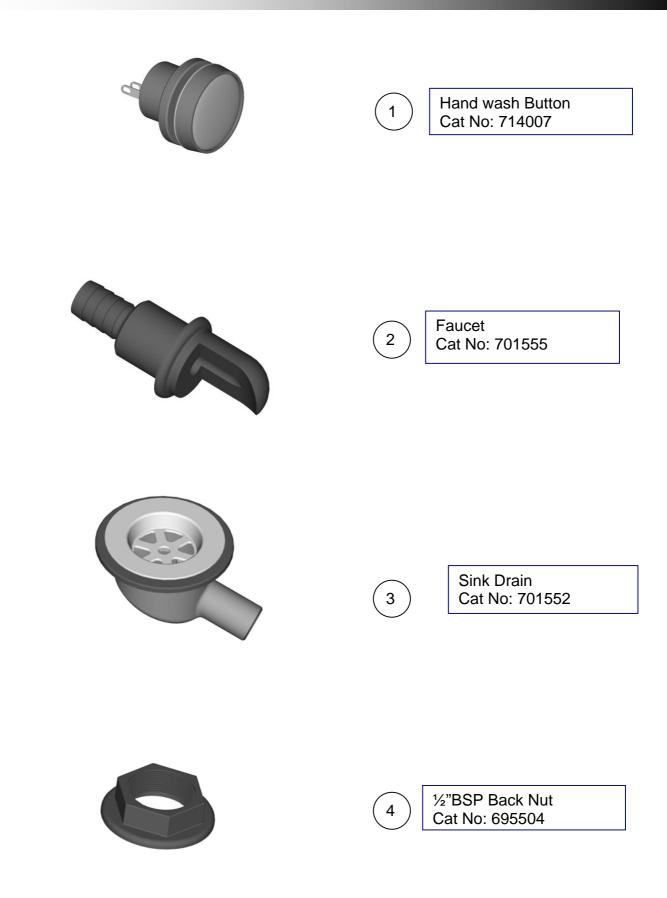

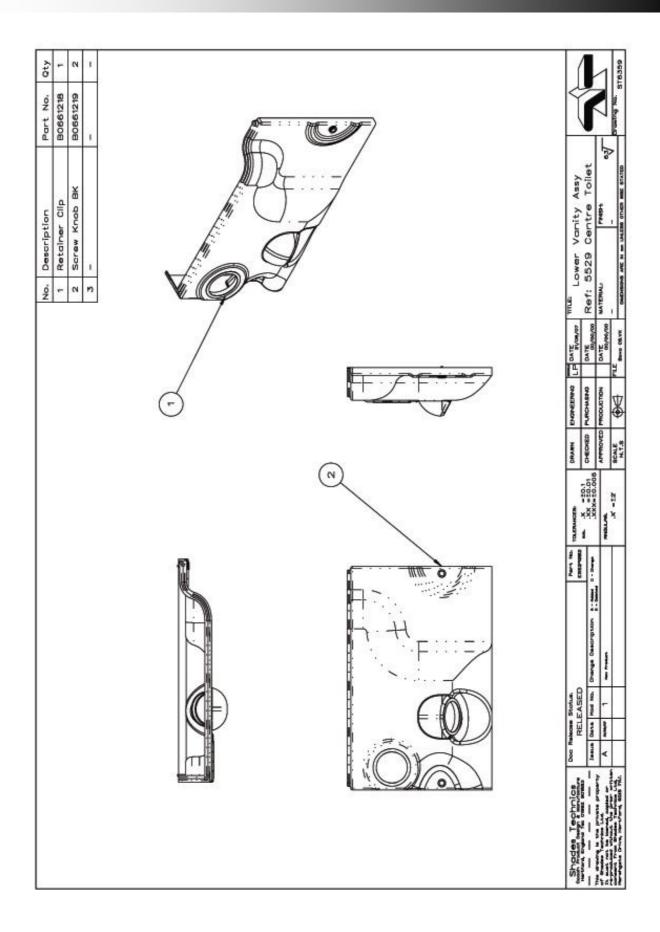


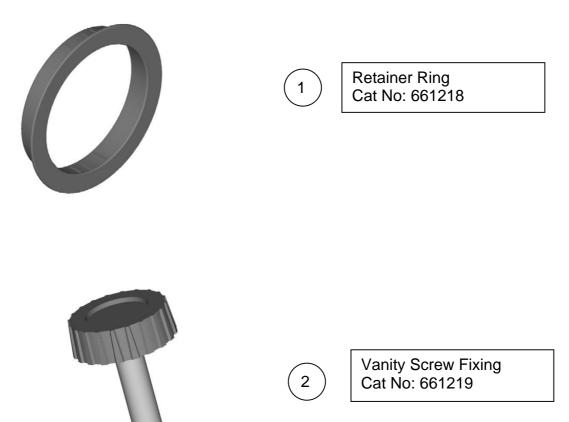


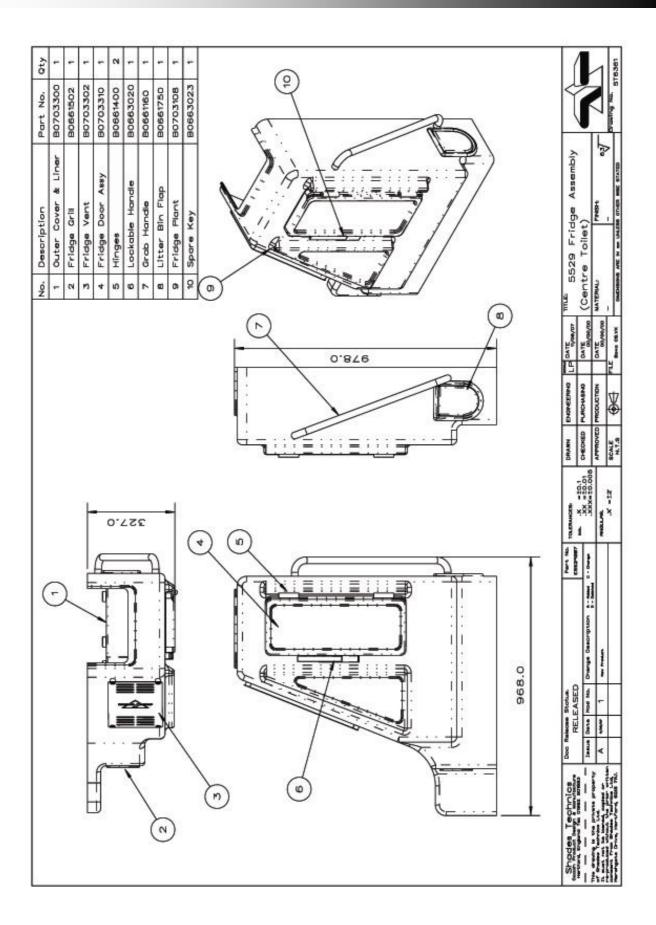



Fridge Spares


Fridge Spares

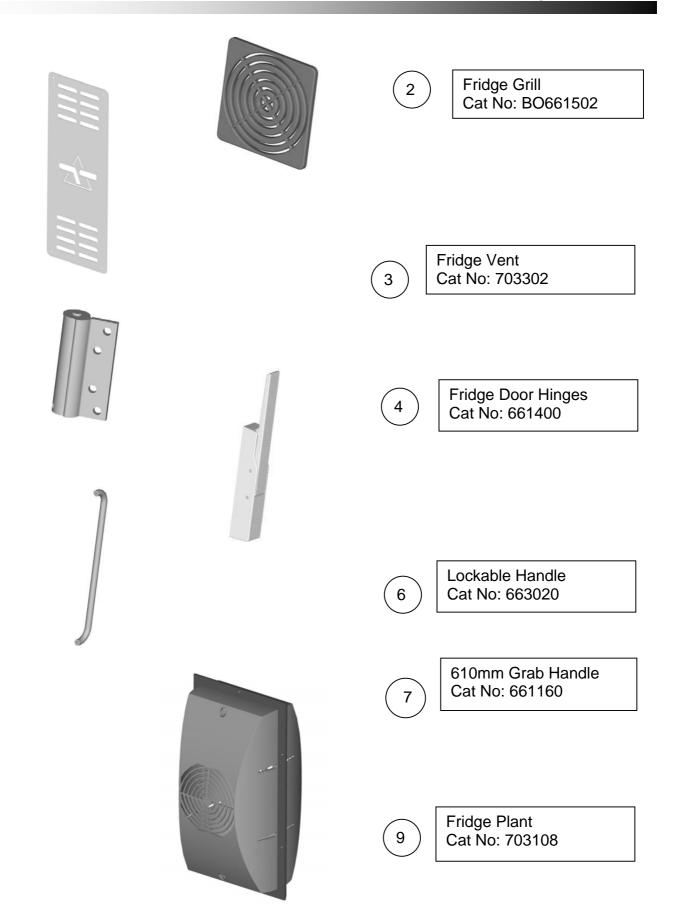


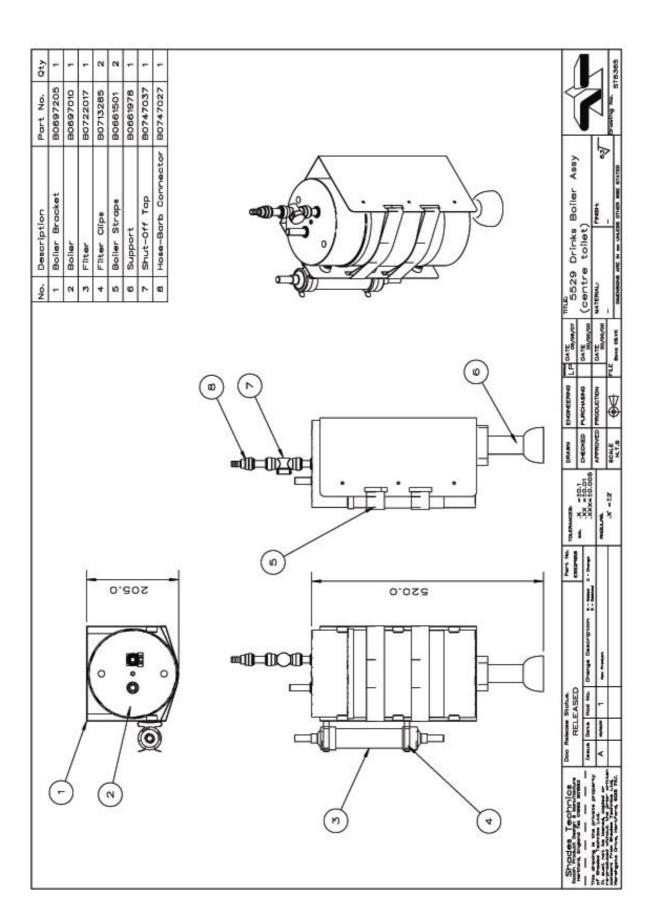


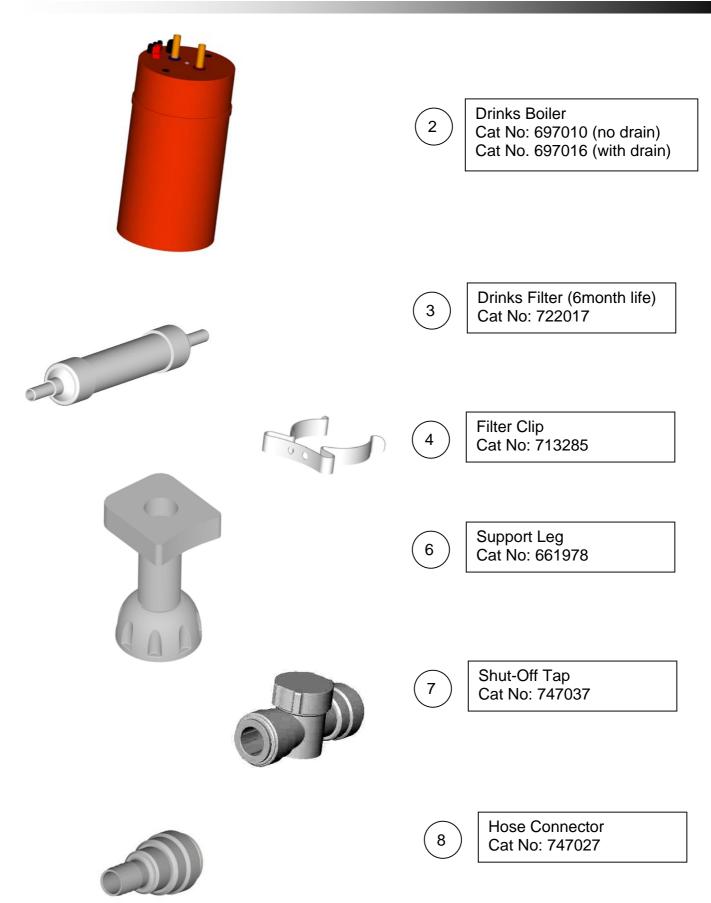


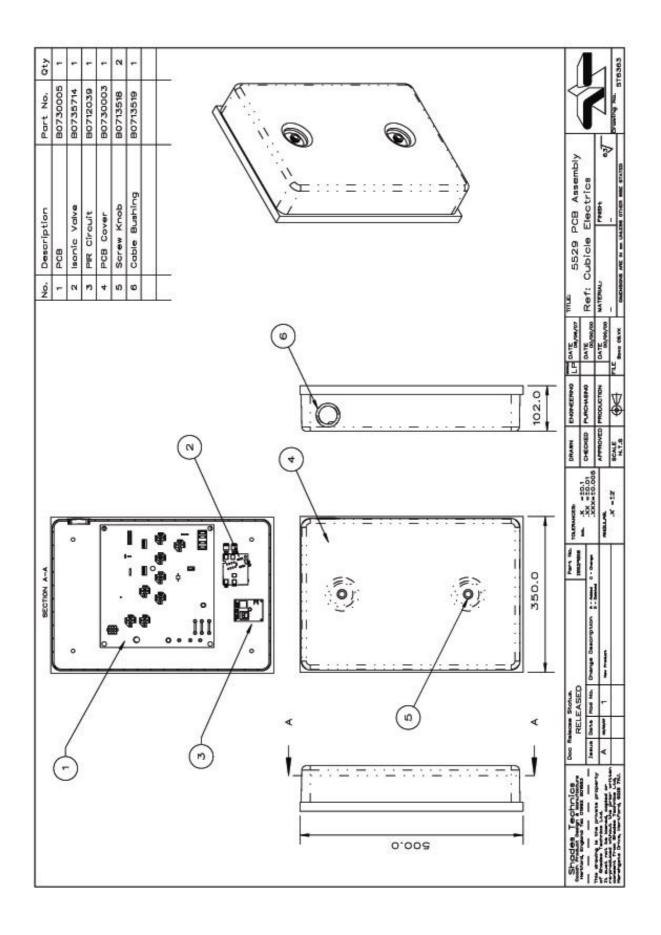

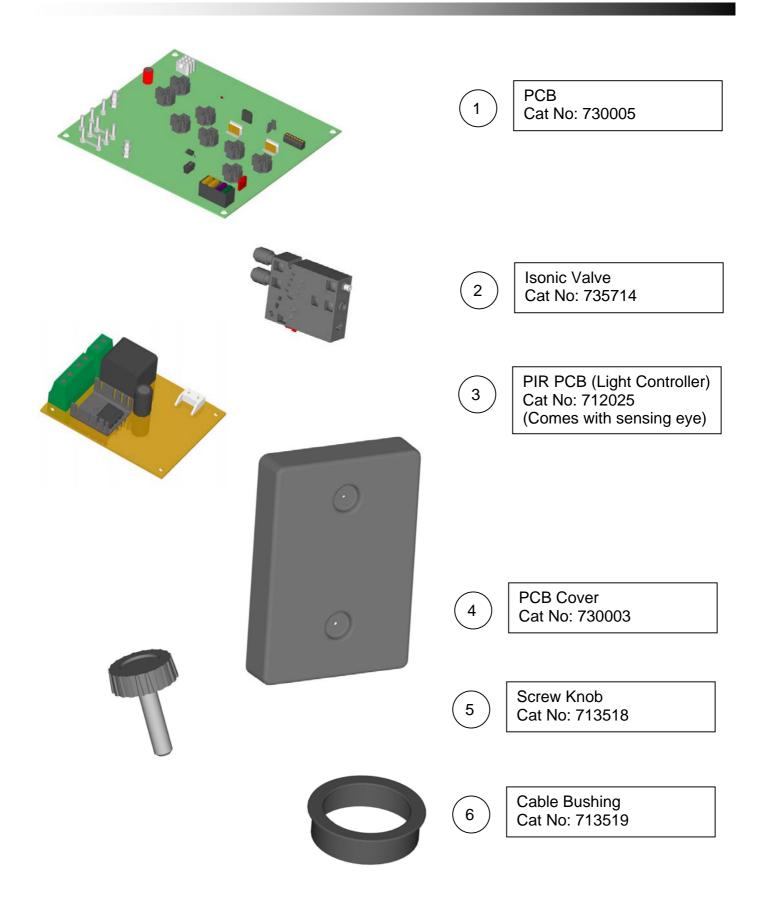


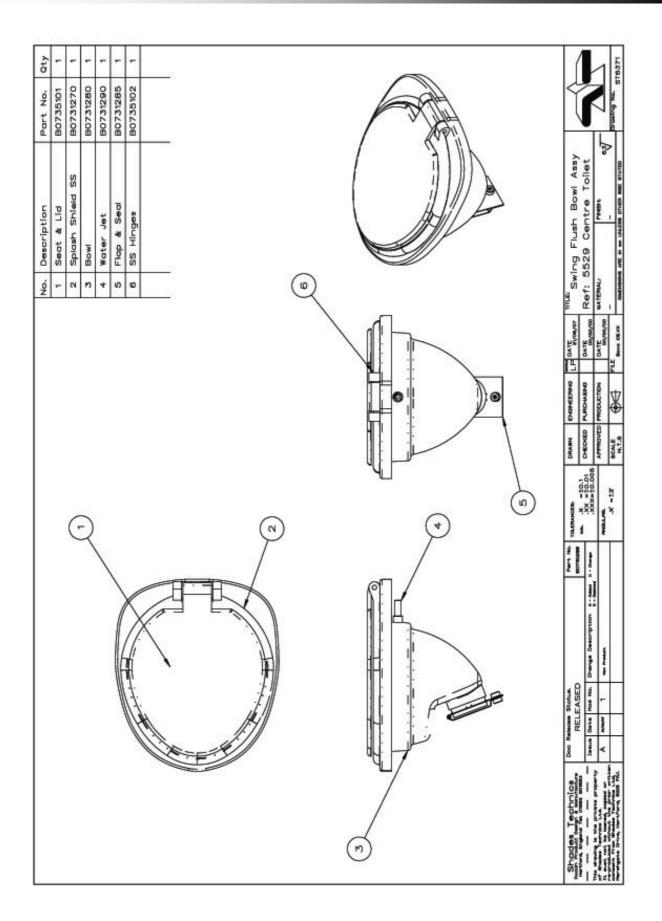


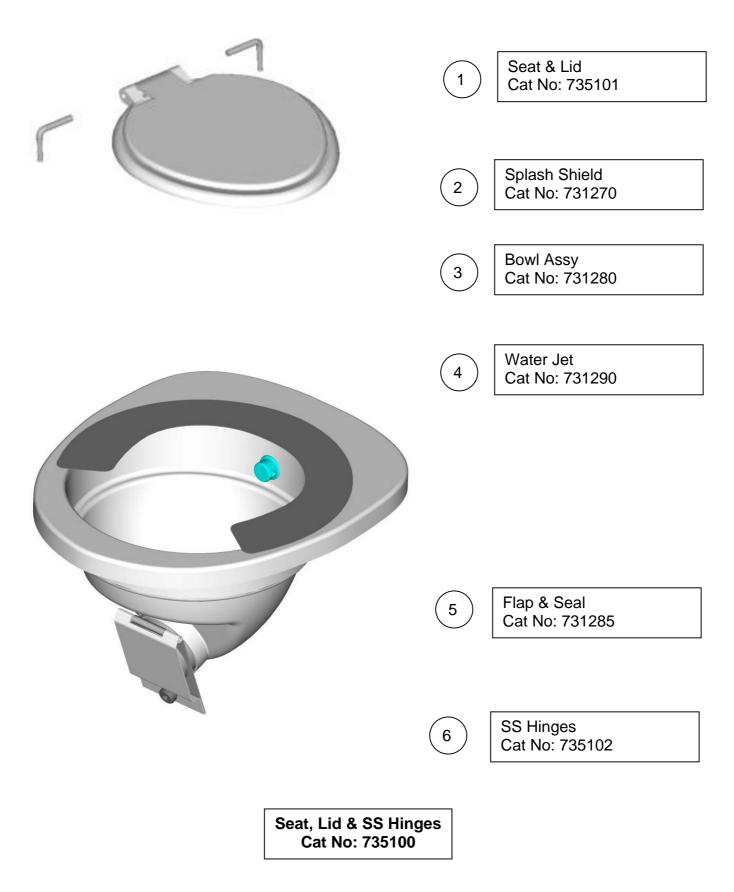

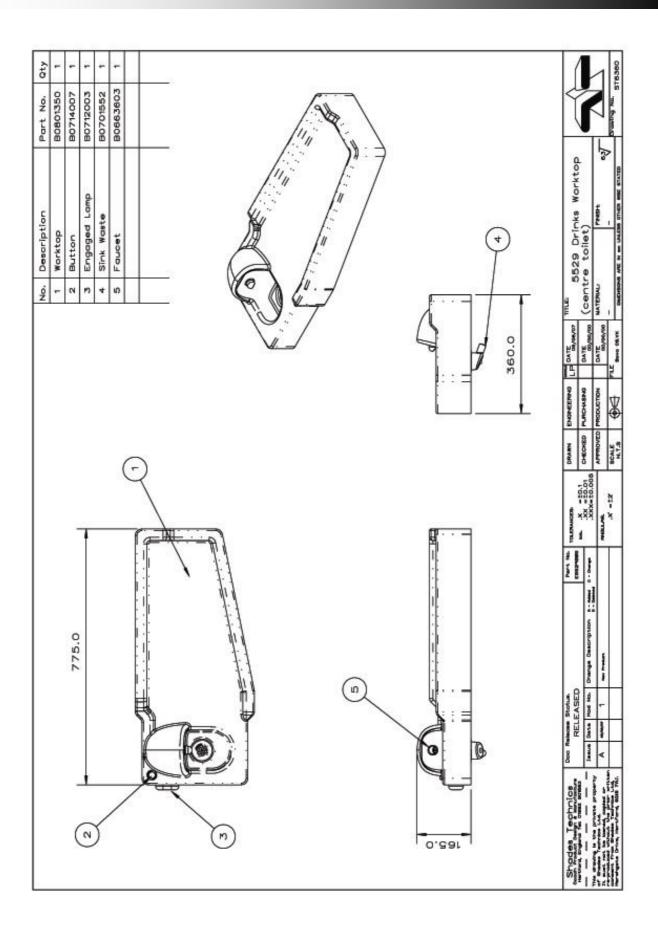



Worktop Spares

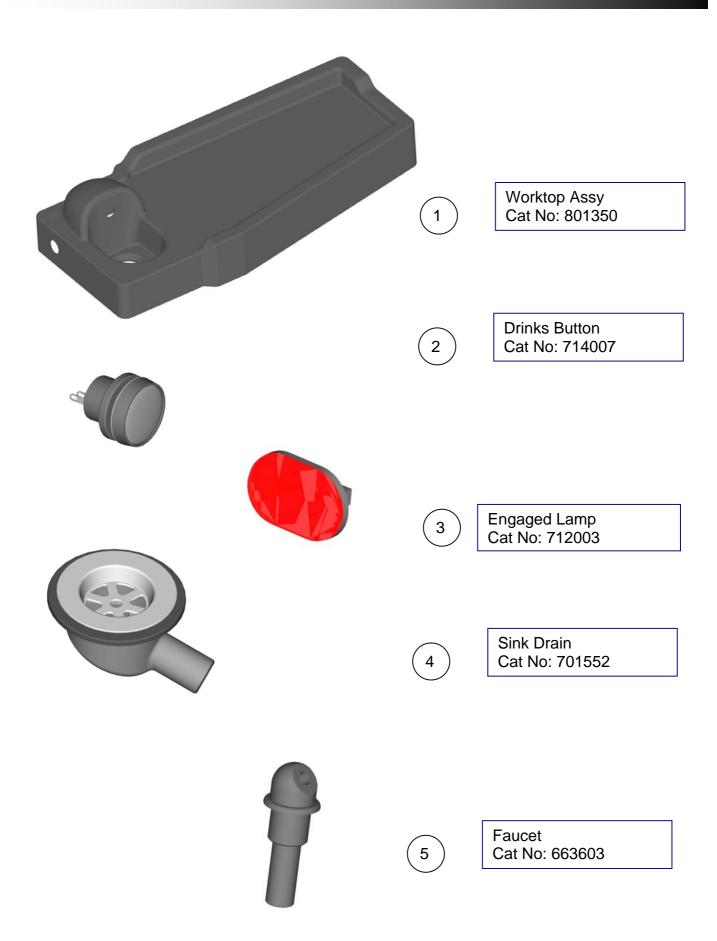


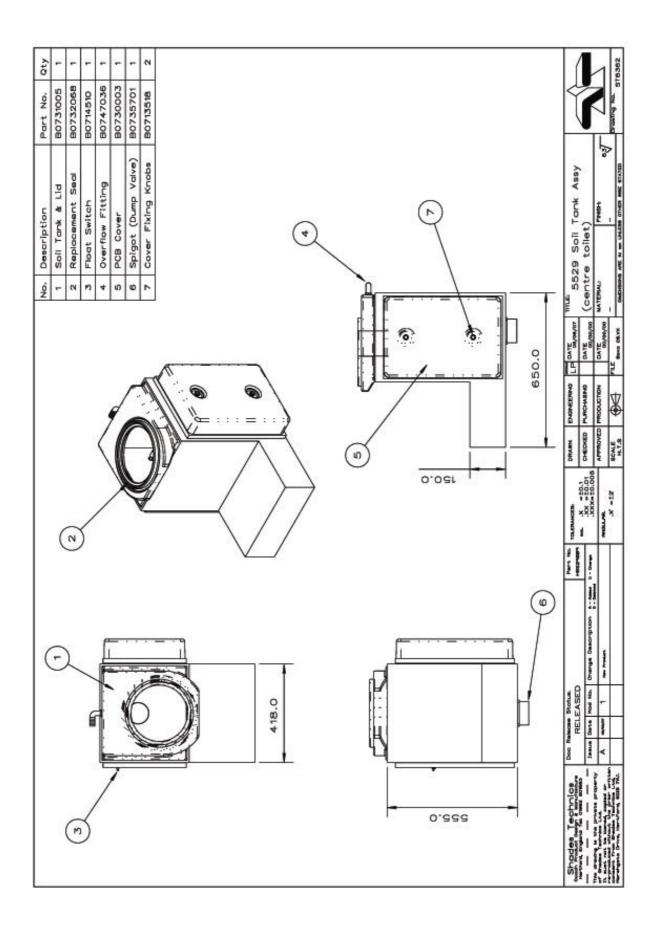



Soil Tank Spares

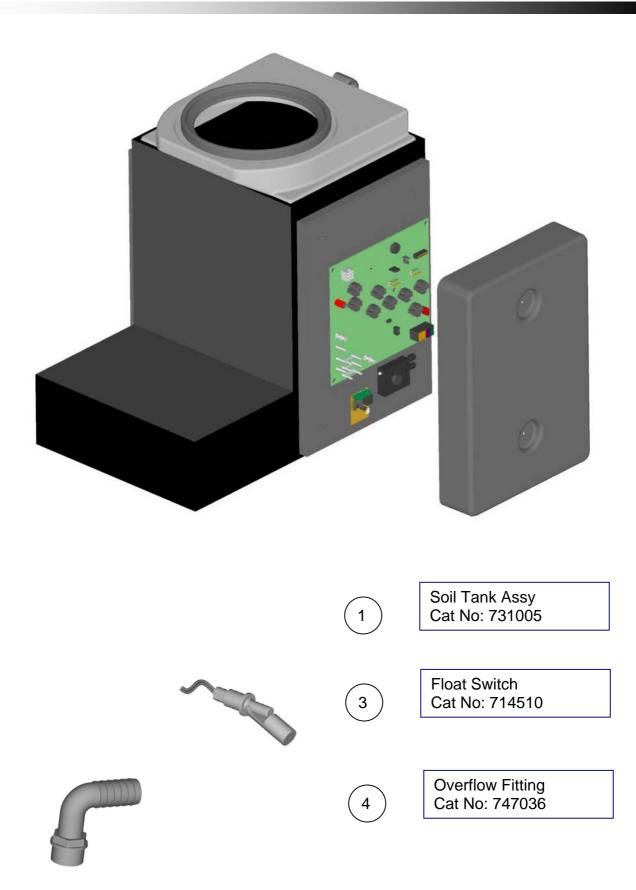


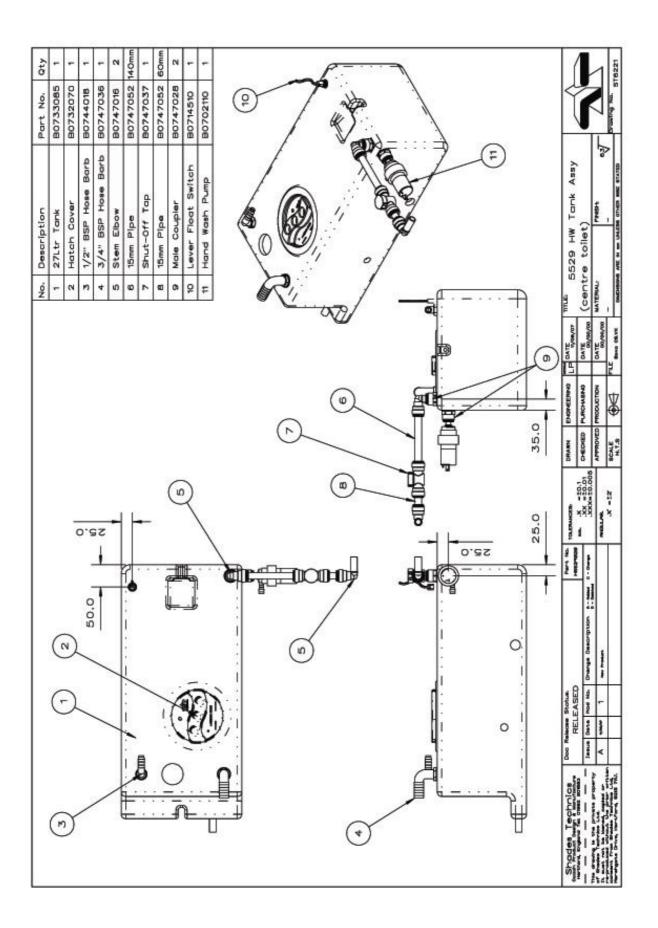


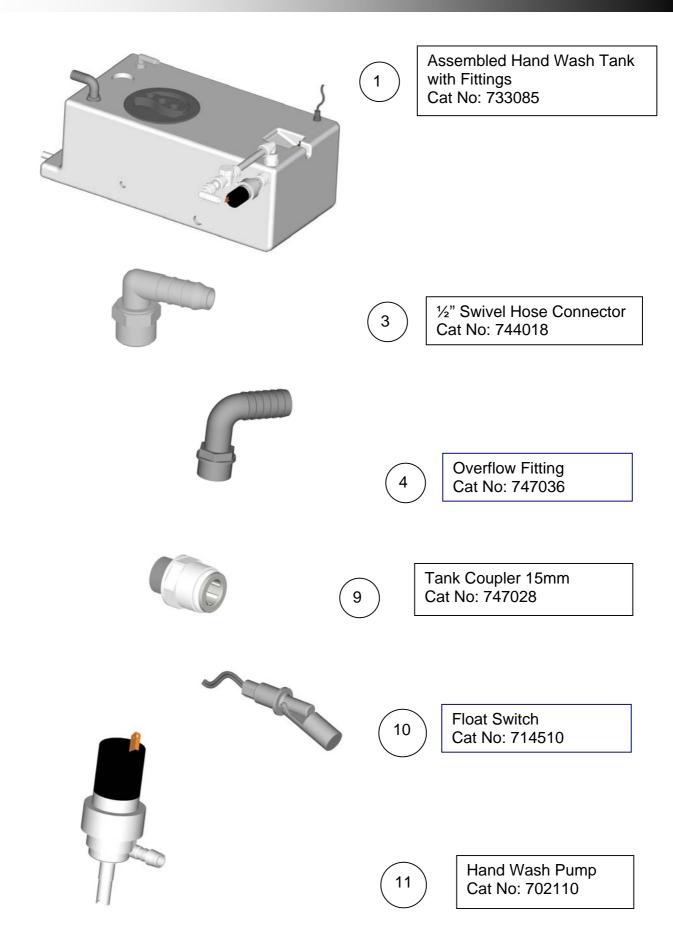


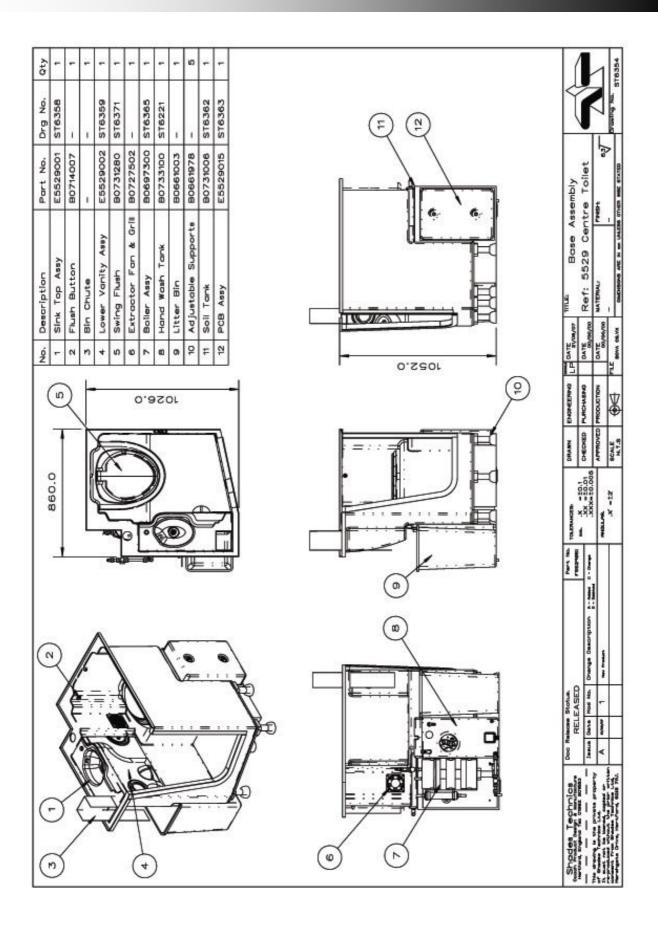


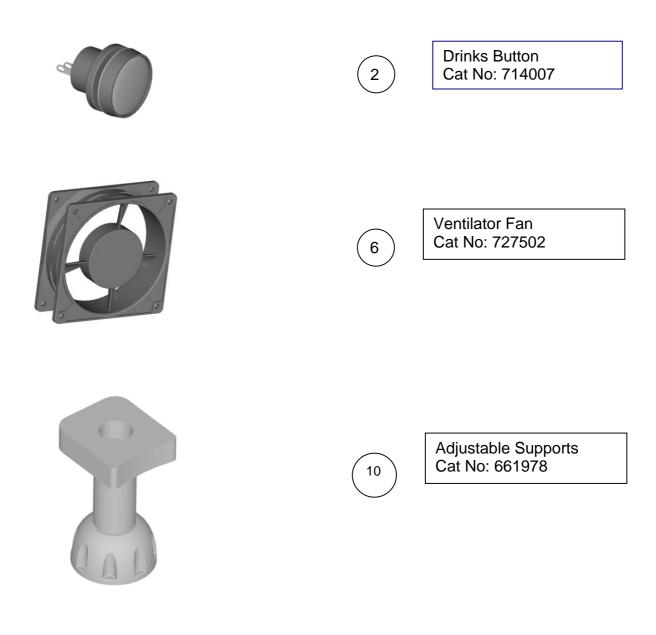

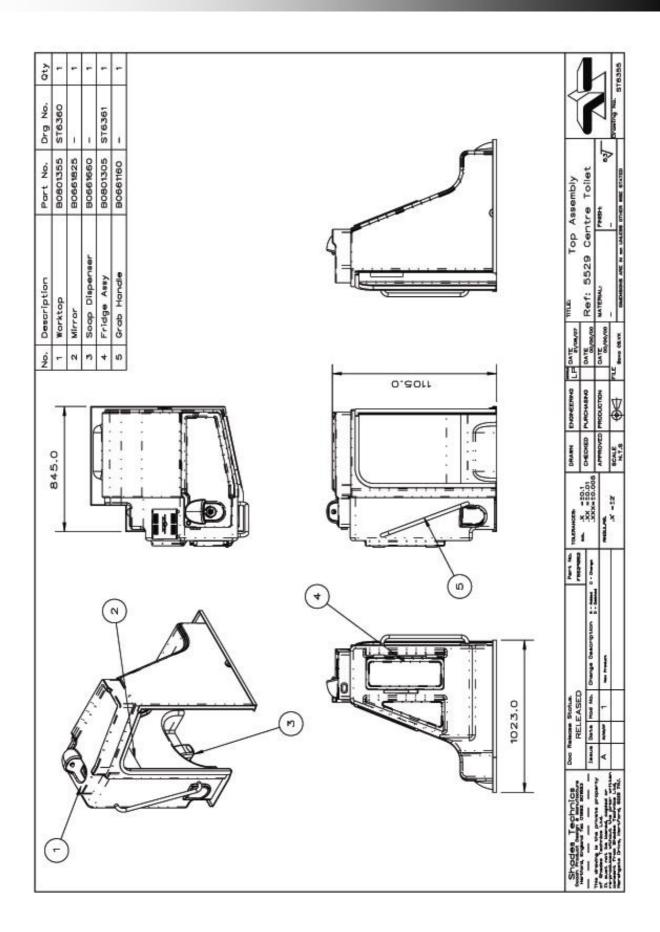

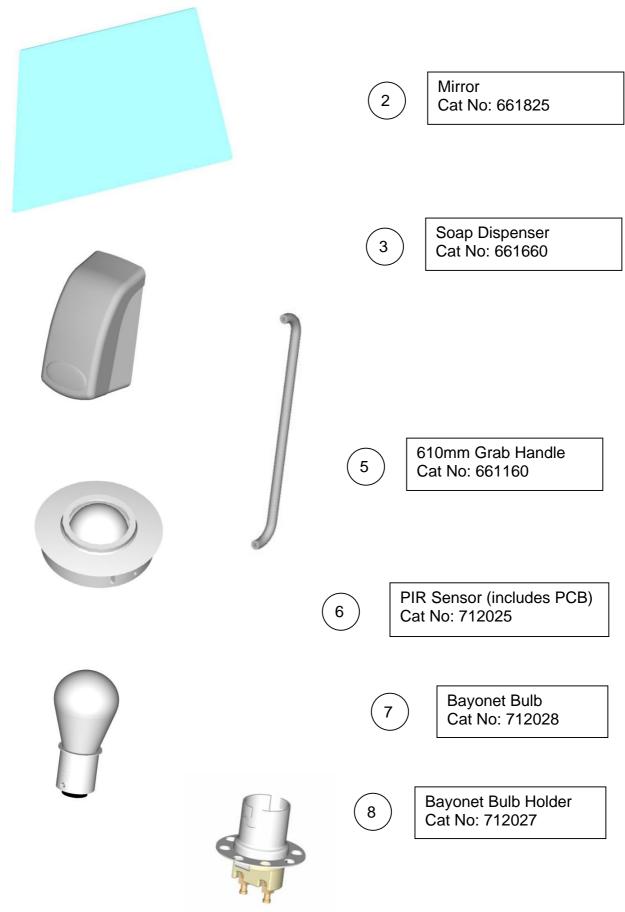


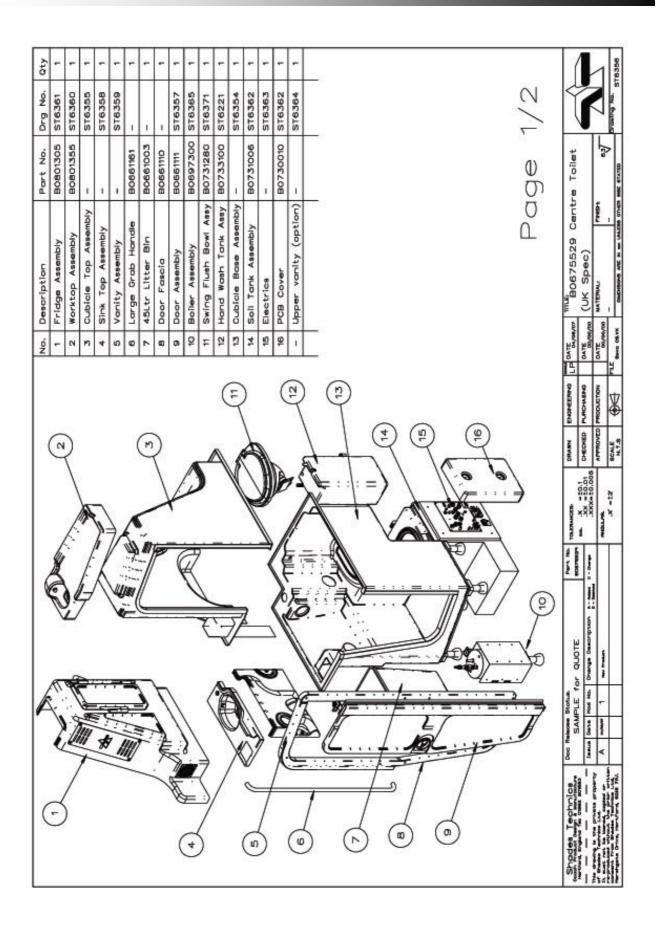

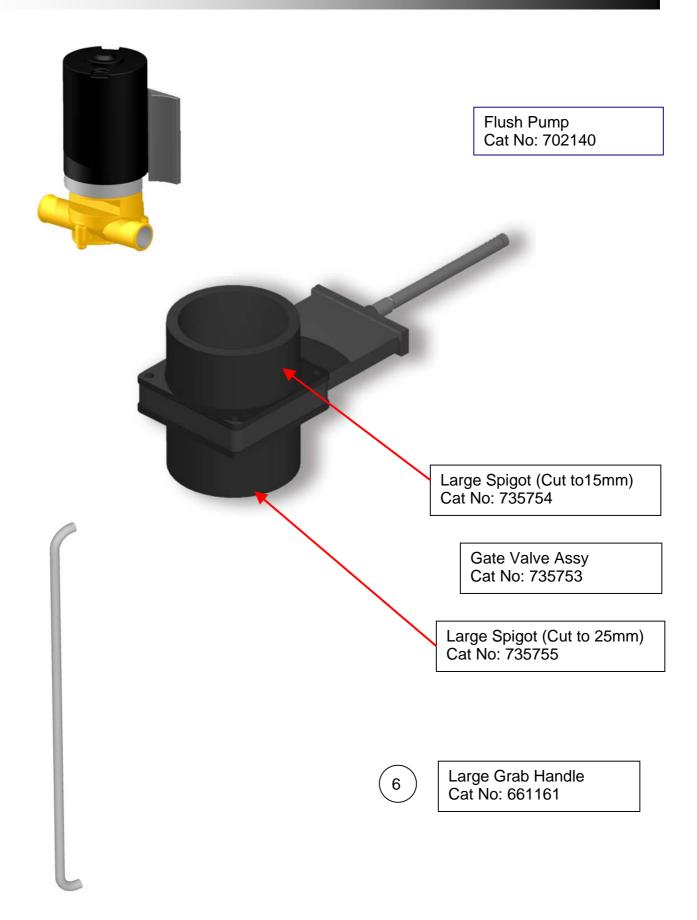


Cubicle Legends



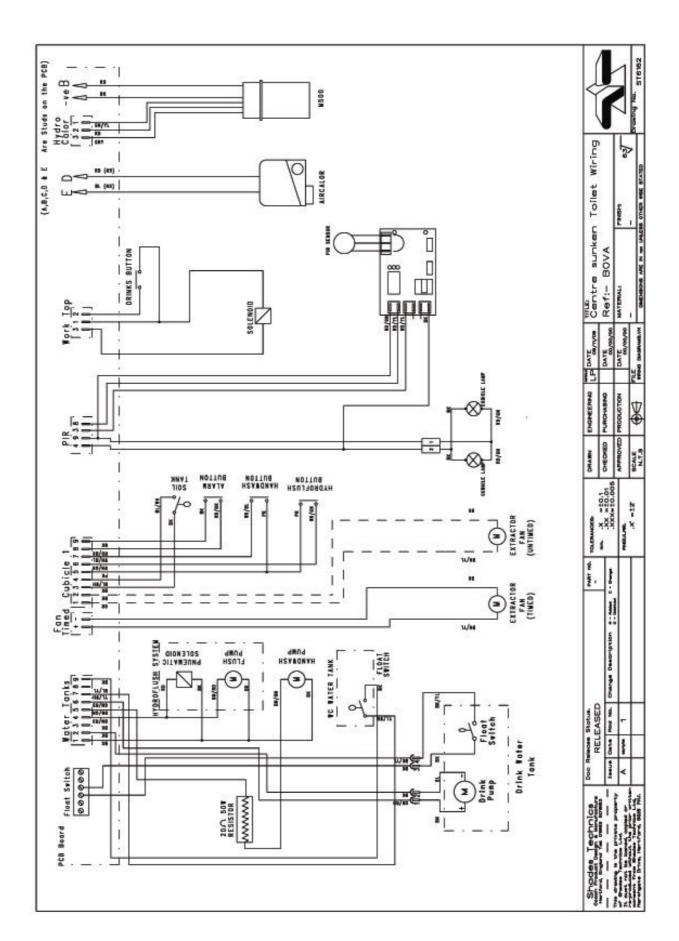


Cubicle Wiring

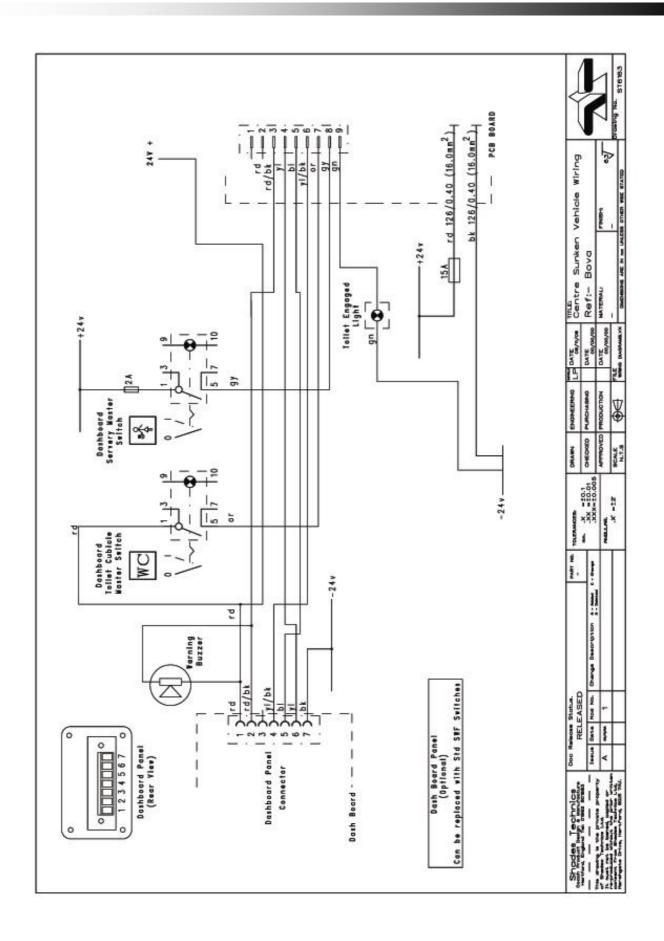

The following section details where to find key components and how to replace them.

Part = Bulbs Location = Cubicle Top Replacement....


- 1. DISCONNECT THE POWER TO THE CUBCILE
- 2. REMOVE PLASTIC LIGHT COVER 4x NYLON SCREWS
- **3. DISCONNECT PIR CONNECTOR**
- 4. TWIST BULB TO RELEASE AND REPLACE

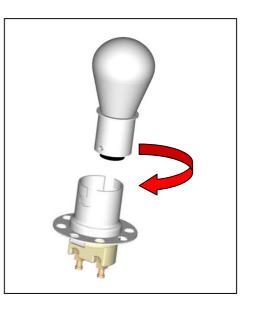

Part = Hand Drier (Optional)

Location = Behind Upper Vanity Door Replacement....


- 1. DISCONNECT THE POWER TO THE CUBICLE
- 2. UNLOCK AND OPEN THE UPPER VANITY DOOR
- 3. REMOVE 2x SCREWS ON THE UNDERSIDE OF THE HAND DRIER
- 4. REMOVE THE FRONT COVER OF THE HAND DRIER
- 5. REMOVE 2x RUBBER HOLE COVERS
- 6. REMOVE 3x SCREWS RELEASING THE UNIT FROM THE WALL
- 7. DISCONNECT THE 2 CABLES PASSING THROUGH THE OUTER WALL OF THE CUBICLE MAKING SURE THEY DO NOT FALL DOWN THE BACK
- 8. RE-CONNECT A NEW UNIT AND SCREW TO THE WALL
- 9. MAKE SURE THE RUBBER HOLE COVERS ARE RE-FITTED AND FIT THE COVER SECURING WITH BOTH SCREWS

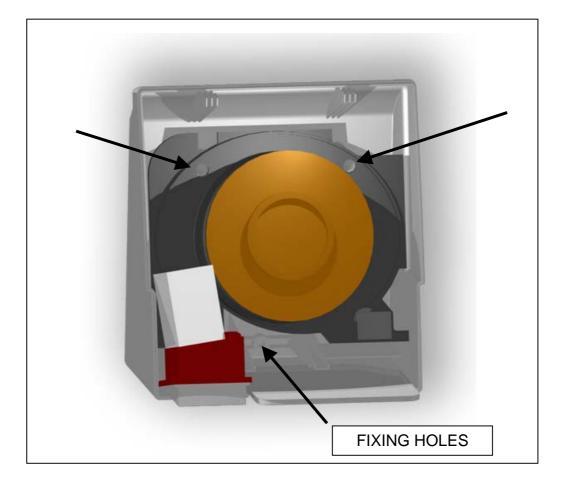

Service

Part = Hand Wash & Flush Buttons Location = Sink Vanity & Worktop Replacement....

- 1. DISCONNECT THE POWER TO THE CUBICLE
- 2. UNLOCK LOWER VANITY DOOR
- 3. REMOVE TERMINALS FROM THE BACK OF THE BUTTON
- 4. UNSCREW THE COLLAR ON THE UNDERSIDE OF THE BUTTON
- 5. BUTTON SHOULD RELEASE FROM THE TOP
- 6. RE-FIT NEW BUTTON AND CONNECT THE TERMINALS

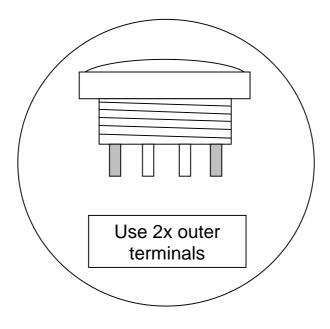


Service

Part = Hand Wash & Flush Pump Location = Locker

Replacement....

- 1. DISCONNECT THE POWER TO THE CUBCILE
- 2. UNLOCK LOWER VANITY DOOR
- 3. DRAIN FRESHWATER TANK
- 4. DISCONNECT THE WIRES TO THE PUMP
- 5. REMOVE FROM SECURING CLIP
- 6. RELEASE INLET AND OUTLET PIPES
- 7. RE-FIT NEW PUMP MAKING SURE THAT BOTH INLET AND OUTLETS ARE WATER TIGHT AND THE FLOW ARROW IS POINTING IN THE CORRECT DIRECTION
- 8. RE-CONNECT THE POWER
- 9. CLOSE THE DRAIN ON THE SUPPLY TANK
- 10. RE-FILL TANK WITH FRESHWATER
- 11. SWITCH ON POWER TO CUBICLE
- 12. PRIME PUMP WITH 2-3 BUTTON PUSHES

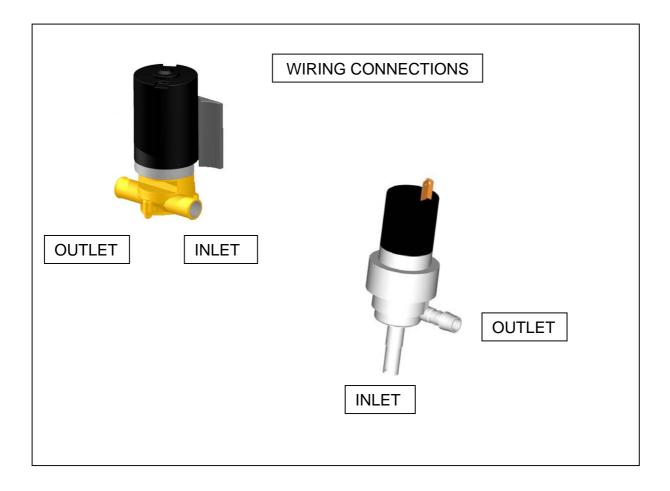

Part = PIR Adjustment & Replacement

Location = Upper Vanity Cupboard – Circuit Board / Vanity - Sensor Adjustment....

- 1. POWER ON
- 2. OPEN UPPER VANITY DOOR
- 3. ADJUST THE 2X BLUE VARIABLE RESISTORS AS SHOWN BELOW

